Intelligent Mains Switching Input/Output Unit



Product overview	
Product	Mains Switching Input/Output Unit
Part No.	SA4700-103AP0
Digital Communication	XP95®,Discovery® and CoreProtocol® compatible

Product information

The Intelligent Mains Switching Input/Output Unit provides a single line tolerant circuit (CoreProtocol only) containing one or more normally open contacts connected to a single pair of cables. It also provides a voltage free change over relay output capable of switching mains.

Refer to Table 1 for digital communications protocol compatibility and Table 2 for the Intelligent Mains Switching Input/Output Unit operating modes.

- Improved design for ease of wiring meaning faster installation
- Contains controllable isolator *
- Address range 1 254 *
- Nine pre-configured modes, including compatibility mode from XP95/Discovery to CoreProtocol systems *
- · Two input channels
- Failsafe mode (meets BS 7273-4 requirements)
- Configurable input styles *

Manufacturer's Specification

Supply voltage (Vmin-Vmax) 17 V - 35 V dc

All data is supplied subject to change without notice. Specifications are typical at 24V, 25°C and 50% RH unless otherwise stated.

Protocol	5 V – 13 V peak to pea
Power-up surge current	1.1 mA
Quiescent current	700 μΑ
Max current LEDs On	5.2 mA
Max current LEDs disabled	700 μΑ
Relay output contact rating	5 A at 30 V dc or 250 V

Isolator data Refer to the Short-Circuit Isolation

Humidity 0% to 95% RH (no condensation or icing)

Vibration, impact and shock EN 54-17:2005 and EN 54-18:2005

P rating IP54

Standards and approvals EN 54-17:2005, EN 54-18:2005

Dimensions 60 mm height x 150 mm width x

90 mm depth

Weight 301g

Table 1: Digital communications protocol compatibility		
Protocol	Device Behaviour	
	VDOE	

Protocol	Device Behaviour
XP95 [†] /Discovery [†]	XP95
CoreProtocol [†]	Soteria

[†] Fire control panel dependant

36 Brookside Road, Havant Hampshire, PO9 1JR, UK.

Tel: +44 (0)23 9249 2412 Fax: +44 (0)23 9249 2754

Email: enquiries@apollo-fire.com Web: www.apollo-fire.co.uk All information in this document is given in good faith but Apollo Fire Detectors Ltd cannot be held responsible for any omissions or errors. The company reserves the right to change the specifications of products at any time and without prior notice.













^{*} Note: CoreProtocol enabled systems feature only, please check with your system partner for availability.

Table 2: Intelligent Mains Switching Input/Output Unit operating modes*		
Mode	Description	
1	DIL Switch XP Mode	
2	Alarm delays	
3	Output and N/O input (can be equivalent for Output only)	
4	Output and N/C input	
5	Output with Feedback (N/C)	
6	FailSafe Output with Feedback (N/C)	
7	FailSafe Output without Feedback	
8	Momentary Input Activation Sets Output Relay	
9	Input Activation Sets Output	

^{*} CoreProtocol enabled systems only

Failsafe Mode

In Failsafe mode the Intelligent Mains Switching Input/ Output Unit will activate the on-board relay without being commanded by the control panel on loss of loop or protocol loss. Failsafe mode is selected via a DIL switch and indicated with an analogue value of 17.

Mechanical Construction

The Intelligent Mains Switching Input/Output Unit (see Figure 1) is available in the new faceplate style enclosure. This can be mounted with the supplied back-box for surface mounting or flush mounted using a UK double gang, flush mounting back-box of minimum depth 30mm.

EMC Directive 2014/30/EU

The Intelligent Mains Switching Input/Output Unit complies with the essential requirements of the EMC Directive 2014/30/EU, provided that it is used as described in this datasheet.

A copy of the Declaration of Conformity is available from Apollo on request.

Conformity of the Intelligent Mains Switching Input/Output Unit with the EMC Directive, does not confer compliance with the directive on any apparatus or systems connected to them.

Construction Products Regulation 305/2011/EU

The Intelligent Mains Switching Input/Output Unit complies with the essential requirements of the Construction Products Regulation 305/2011/EU.

 $\ensuremath{\mathsf{A}}$ copy of the Declaration of Performance is available from Apollo on request.

Connectivity

Refer to Figures 2, and 3 for unit connection information. Refer to Installation Guide 39215-161 for the installation instructions on this product. Table 3 details the status indications of this unit, from normal operation through to fault conditions.

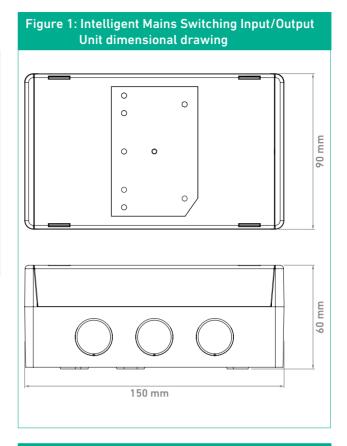


Table 3: Status Indications		
Legend	LED Status	Description
RLY	Continuous Red	Relay Active
RLY	Continuous Yellow	Relay Fault
Poll/ISOL	Flashing Green	Polling LED
Poll/ISOL	Continuous Yellow	Isolator LED
I/P 1, IP 2	Continuous Yellow	Input Fault
I/P 1, IP 2	Continuous Red	Input Active

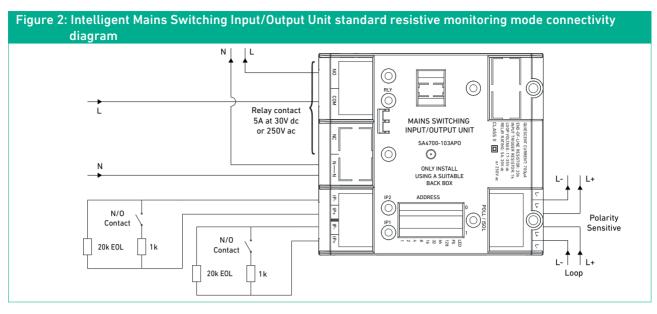


Figure 3: Intelligent Mains Switching Input/Output Unit single fault tolerant zone monitoring mode connectivity diagram (compatible with CoreProtocol only) \bigcirc Relay contact 5A at 30V dc MAINS SWITCHING or 250V ac INPUT/OUTPUT UNIT SA4700-103AP0 \bigcirc 0 N ONLY INSTALL USING A SUITABLE BACK BOX I L+ L- I ADDRESS IP+ IP- IP-Polarity N/O (IP1 Sensitive Contact 128 64 32 L-Î_{L+} Loop